

SHARP®

LC-20S5E-BK LC-20S5E-WH

LCD COLOUR TELEVISION
LCD-FARBFERNSEHGERÄT
TÉLÉVISION COULEUR À ÉCRAN
À CRISTAUX LIQUIDES (LCD)
TELEVISORE A COLORI LCD
TELEVISIÓN EN COLOR LCD
LCD-KLEURENTELEVISIE

OPERATION MANUAL
BEDIENUNGSANLEITUNG
MODE D'EMPLOI
MANUALE DI ISTRUZIONI
MANUAL DE MANEJO
GEBRUIKSAANWIJZING

AQUOS



ENGLISH

DEUTSCH

FRANÇAIS



ITALIANO

ESPAÑOL

NEDERLANDS



SPECIAL NOTE FOR USERS IN THE UK

The mains lead of this product is fitted with a non-rewireable (moulded) plug incorporating a 3A fuse. Should the fuse need to be replaced, a BSI or ASTA approved BS 1362 fuse marked  or  and of the same rating as above, which is also indicated on the pin face of the plug, must be used.

Always refit the fuse cover after replacing the fuse. Never use the plug without the fuse cover fitted.

In the unlikely event of the socket outlet in your home not being compatible with the plug supplied, cut off the mains plug and fit an appropriate type.

DANGER: The fuse from the cut-off plug should be removed and the cut-off plug destroyed immediately and disposed of in a safe manner.

Under no circumstances should the cut-off plug be inserted elsewhere into a 13A socket outlet, as a serious electric shock may occur.

To fit an appropriate plug to the mains lead, follow the instructions below:

IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:

Blue : Neutral

Brown : Live

As the colours of the wires in the mains lead of this product may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows;

- The wire which is coloured blue must be connected to the plug terminal which is marked N or coloured black.
- The wire which is coloured brown must be connected to the plug terminal which is marked L or coloured red.

Ensure that neither the brown nor the blue wire is connected to the earth terminal in your three-pin plug.

Before replacing the plug cover make sure that:

- If the new fitted plug contains a fuse, its value is the same as that removed from the cut-off plug.
- The cord grip is clamped over the sheath of the mains lead, and not simply over the lead wires.

IF YOU HAVE ANY DOUBT, CONSULT A QUALIFIED ELECTRICIAN.

LC-20S5E-BK LC-20S5E-WH

LCD COLOUR TELEVISION

ENGLISH

OPERATION MANUAL

Contents


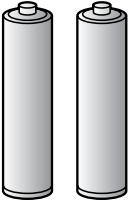
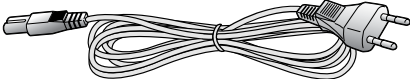
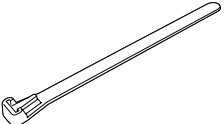
Supplied Accessories	1	Sound Mode Settings	10
Dear SHARP Customer	2	NICAM and A2 Stereo Broadcast Selection	10
Important Safety Precautions	2	Setup Settings.....	11
Preparation	3	Programmes	12
Setting the TV.....	3	Using the Programme Table	13
How to Fix the Cables.....	3	Wide Mode.....	13
How to Prevent the LCD TV Set from Falling Over ..	3	Feature Settings.....	13
Installing Batteries in the Remote Control.....	4	Child Lock.....	14
Using the Remote Control.....	4	Teletext	15
Part Names of the Remote Control	5	Appendix	15
Part Names of the Main Unit	6	PC compatibility chart.....	15
Connecting External Devices	7	RS-232C port specifications.....	16
Basic Operation	8	Troubleshooting	17
First Installation	8	Specifications	18
Selecting Menu Items	8	End of Life Disposal	19
Useful Features	9		
Picture Adjustments.....	9		
Sound Adjustments.....	9		
Picture Mode Settings.....	9		

Dimensional Drawings

- The dimensional drawings for this model are shown on the inside of the back cover.

Supplied Accessories

Make sure the following accessories are provided with the LCD TV set.

Wireless remote control	"AA" size batteries (×2)	AC cord	Cable tie (×1)
			
pages 4 and 5	page 4	* Product shape may vary from country to country. page 3	page 3
			Operation manual

Dear SHARP Customer

Thank you for your purchase of the SHARP LCD colour TV product. To ensure safety and many years of trouble-free operation of your product, please read the Important Safety Precautions carefully before using this product.

Important Safety Precautions

- **Cleaning**—Unplug the AC cord from the AC outlet before cleaning the product. Use a damp cloth to clean the product. Do not use liquid cleaners or aerosol cleaners.



- **Water and moisture**—Do not use the product near water, such as bathtub, washbasin, kitchen sink, laundry tub, swimming pool and in a wet basement.




- **Stand**—Do not place the product on an unstable cart, stand, tripod or table. Doing so can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.



- When relocating the product placed on a cart, it must be moved with utmost care. Sudden stops, excessive force and uneven floor surface can cause the product to fall from the cart.




- **Ventilation**—The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.

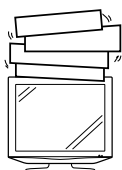


- The LCD panel used in this product is made of glass. Therefore, it can break when the product is dropped or applied with impact. Be careful not to be injured by broken glass pieces in case the LCD panel breaks.




- **Heat sources**—Keep the product away from heat sources such as radiators, heaters, stoves and other heat-generating products (including amplifiers).

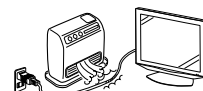


- Do not place vases or any other water-filled containers on this product. The water may spill onto the product causing fire or electric shock.

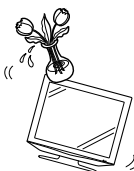

- To prevent fire, never place any type of candle or naked flames on the top or near the TV set.

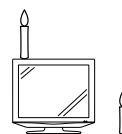

- To prevent fire or shock hazard, do not place the AC power cord under the TV set or other heavy items.

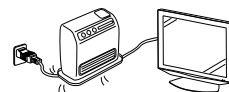


The LCD panel is a very high technology product with 921,600 thin film transistors, giving you fine picture details. Due to the very large number of pixels, a few non-active pixels may occasionally appear on the screen as a fixed point of blue, green or red. This is within product specifications and does not constitute a fault.

Do not display a still picture for a long time, as this could cause an afterimage to remain.

There is power consumption always if main plug is connected.

Preparation

Setting the TV

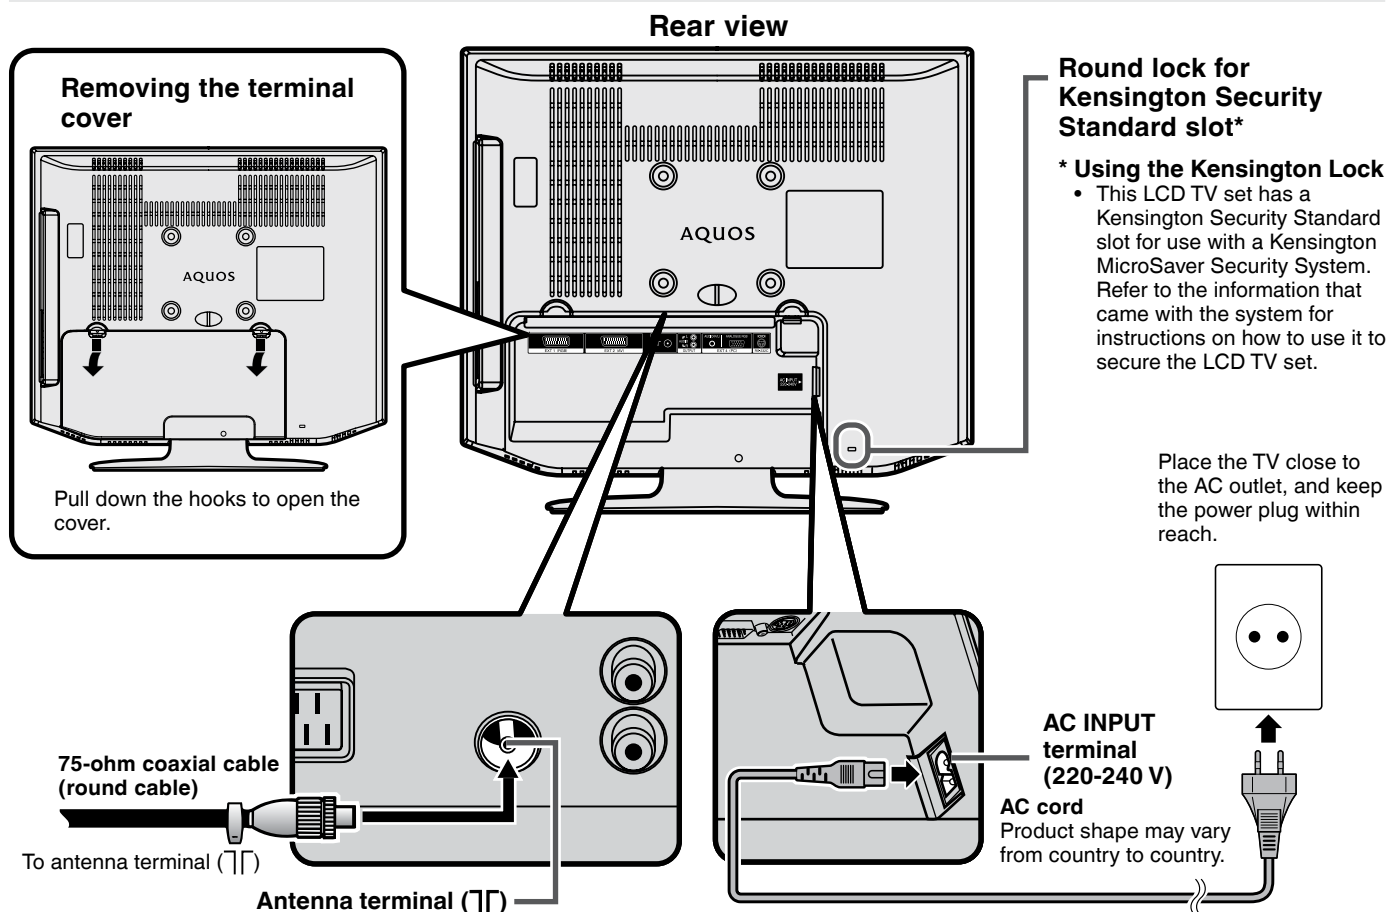


NOTE

- Unplug the AC cord from the LCD TV set and power outlet when the LCD TV set is not to be used for a long period of time.
- Please ensure your 75-ohm coaxial cable is fitted with a DIN 45325 (IEC169-2) coaxial plug and plug it into the antenna terminal at the rear of the LCD TV set (antenna cable not supplied).

How to Fix the Cables

Secure cables and cords with the supplied cable tie so that they do not get caught when mounting the cover.

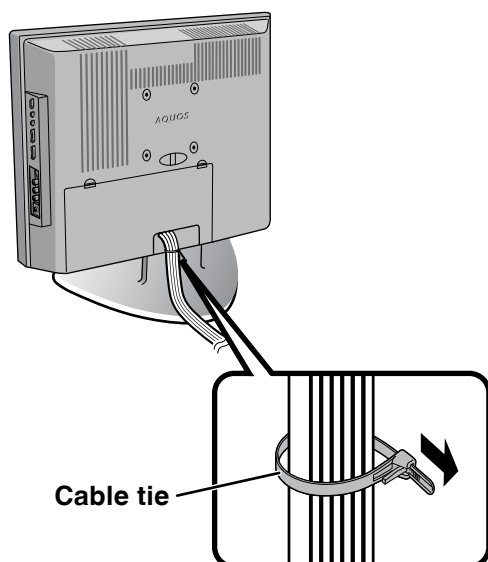


How to Prevent the LCD TV Set from Falling Over

To prevent the LCD TV set from falling over in case of earthquakes and so on, strap it onto the wall by threading one end of the string through the hook on the LCD TV set (①) and fastening the LCD TV set with the string attached to the hook on the wall or the post, etc. (②).

(An example of strapping the LCD TV set onto the wall is shown below.)

- The string and hook are commercially available.

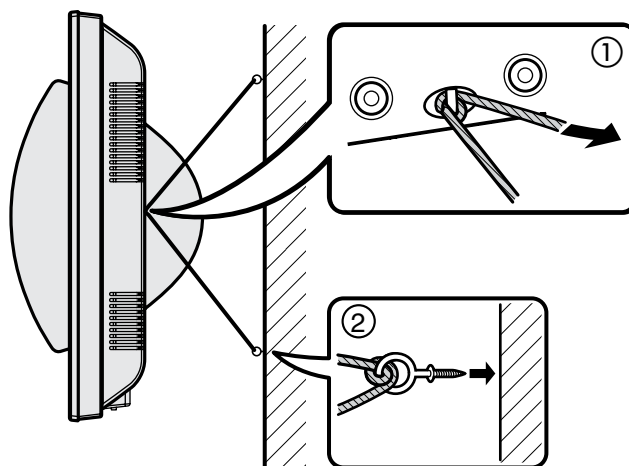


Preparation (continued)


Installing Batteries in the Remote Control

Before using the LCD TV set for the first time, install the two "AA" size batteries (supplied) in the remote control. When the batteries become depleted and the remote control fails to operate, replace the batteries with new "AA" size batteries.



- 1** Press and slide the battery cover to open it.

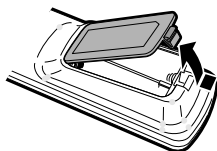

- 2** Insert two supplied "AA" size batteries.

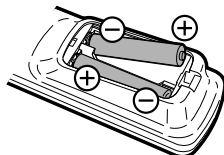

- 3** Close the battery cover.

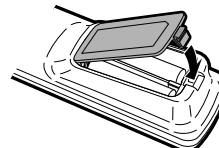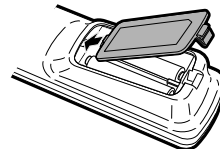

- Place batteries with their terminals corresponding to the (+) and (-) indications in the battery compartment.

Caution!


Precautions regarding batteries

Improper use of batteries can result in a leakage of chemicals and/or explosion. Be sure to follow the instructions below.

- Different types of batteries have different characteristics. Do not mix batteries of different types.
- Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries and/or cause old batteries to leak chemicals.
- Remove batteries as soon as they are depleted. Chemicals that leak from batteries can cause a rash. If chemical leakage is found, wipe it off with a cloth.
- The batteries supplied with the LCD TV set may have a shorter operating time due to storage conditions.
- If the remote control is not to be used for an extended period of time, remove the batteries from the remote control.


Using the Remote Control

Use the remote control by pointing it towards the remote sensor window of the main unit. Objects between the remote control and sensor window may prevent proper operation.

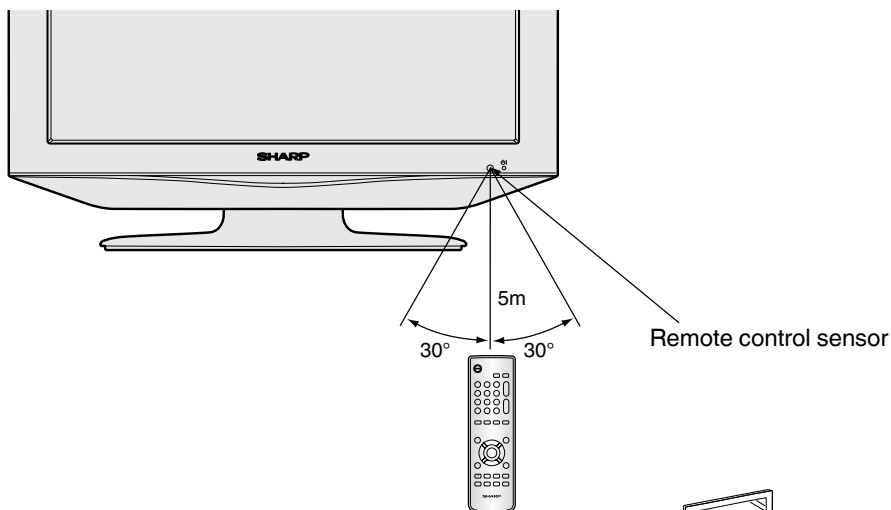


Cautions regarding use of the remote control

- Do not apply shock to the remote control. In addition, do not expose the remote control to liquids, and do not place it in an area with high humidity.
- Do not install or place the remote control in direct sunlight. The heat may cause deformation to it.
- The remote control may not work properly if the remote sensor window is in direct sunlight or strong light. In such a case, change the angle of the lighting or main unit, or operate the remote control closer to the remote sensor window.

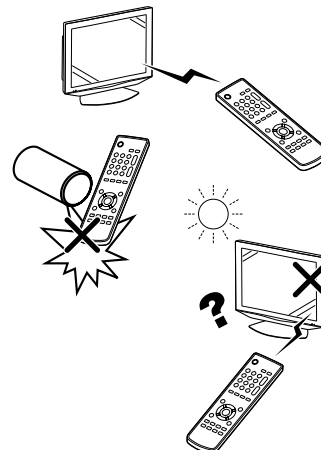

Part Names of the Remote Control

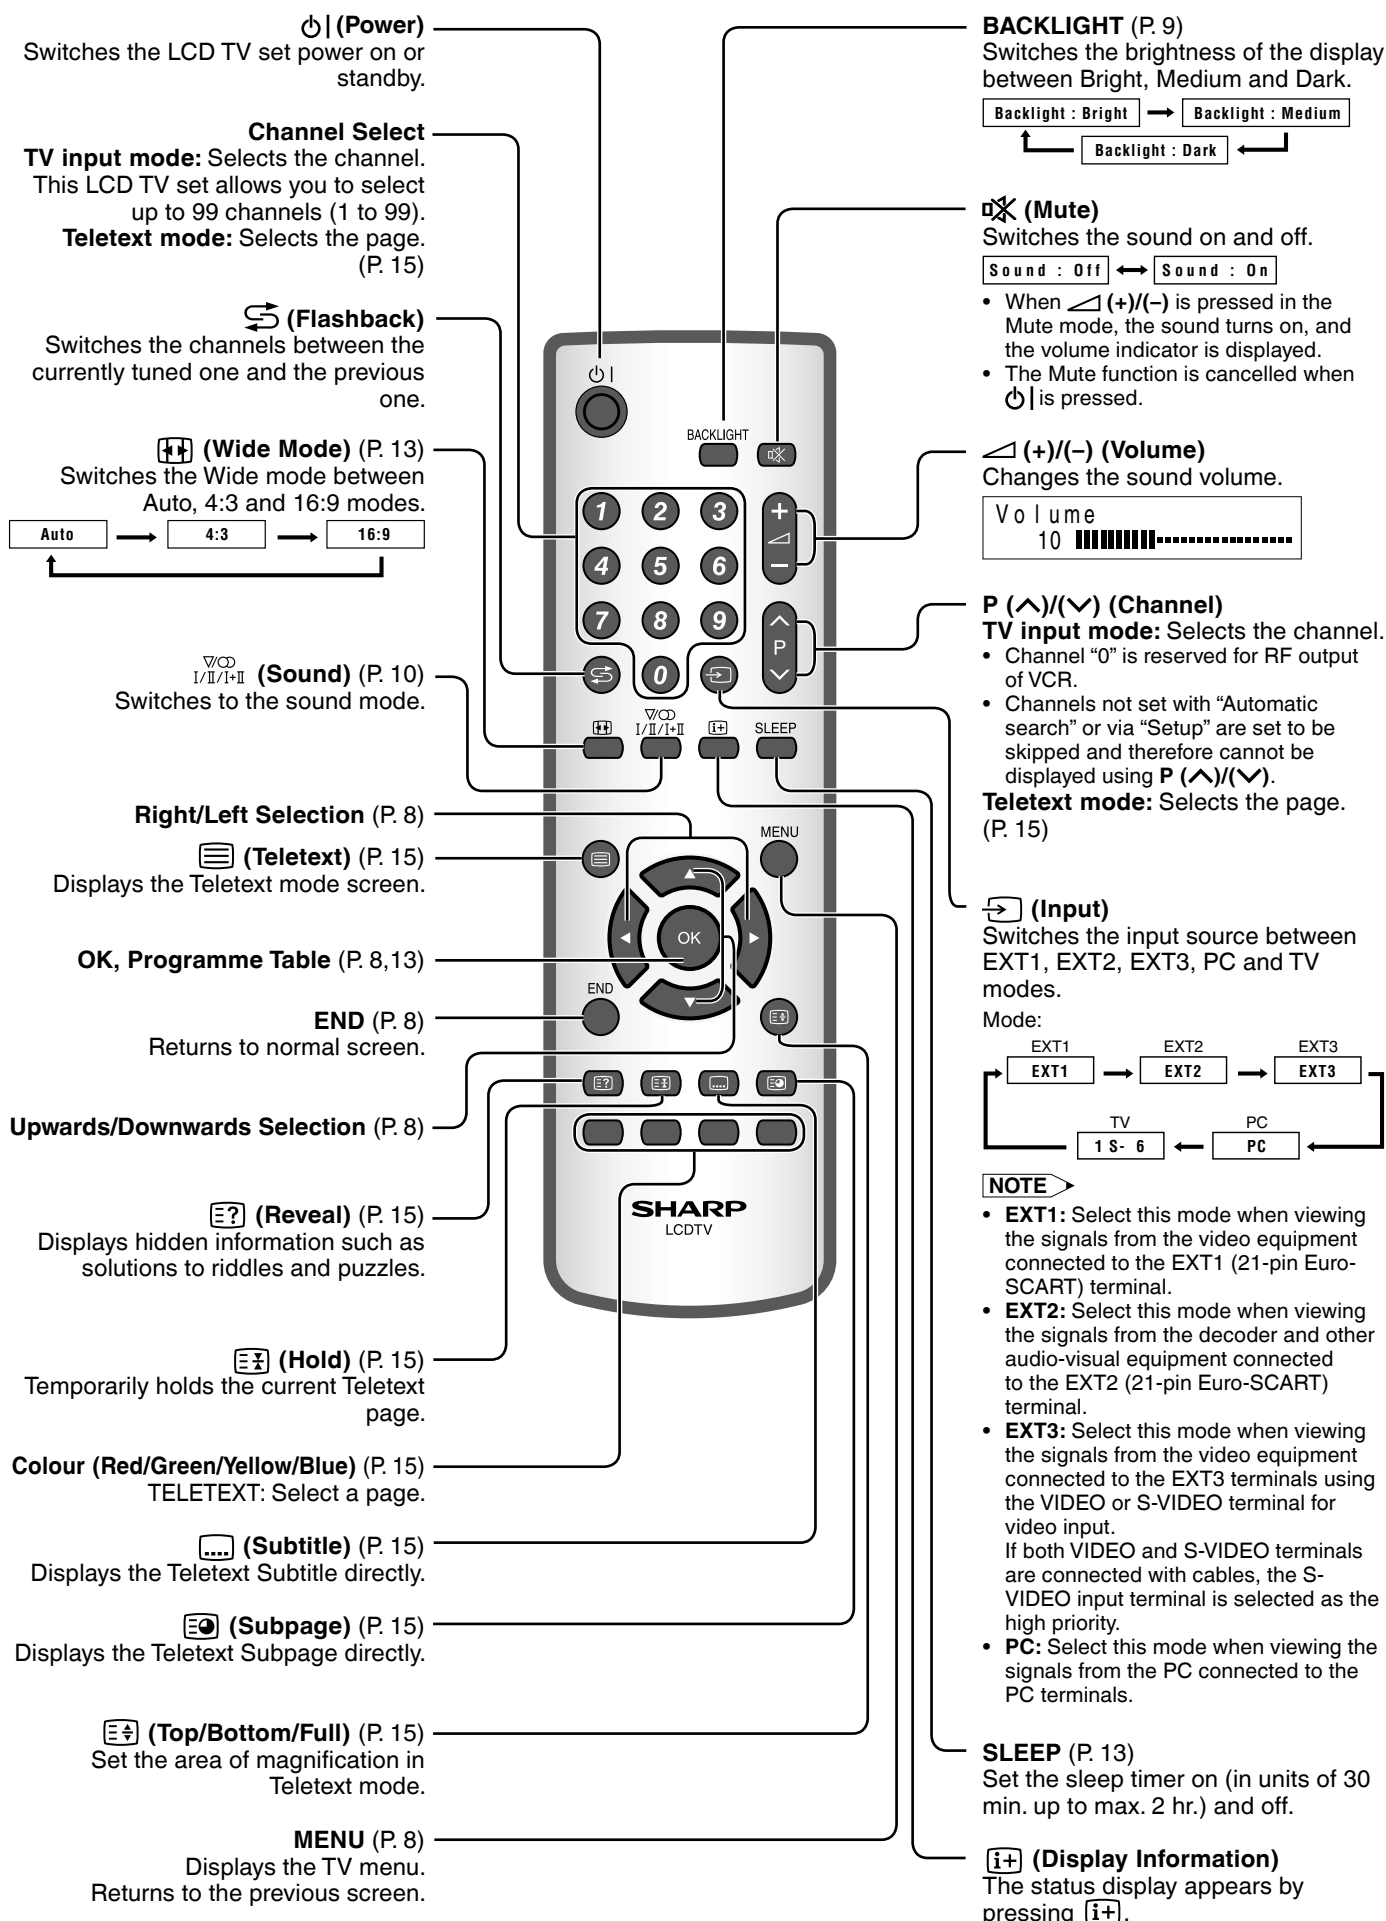


NOTE

- There is a protective film covering the face of the remote control. Please remove this film before use.

Part Names of the Main Unit

Controls

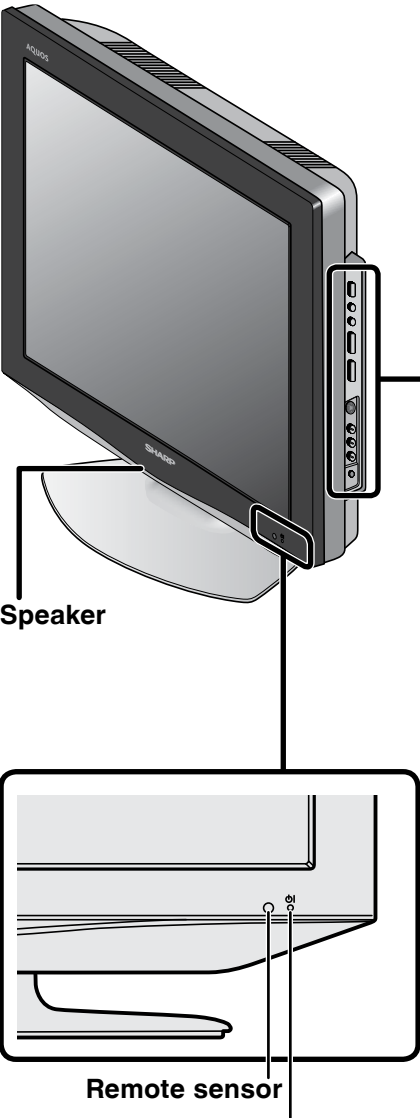


Remote sensor

STANDBY/ON indicator
The STANDBY/ON indicator lights up green when the power is on, and red when in the standby mode (the indicator will not light when the main power is off).

Control panel

■ Using the control panel of the main unit

- (Input), P ()/() (Channel), (+)/(-) (Volume) and MENU on the control panel of the main unit have the same functions as the same buttons on the remote control. Fundamentally, this operation manual provides a description based on operation using the remote control.

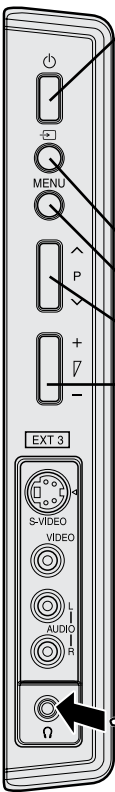

⏻ (MAIN POWER)

- The STANDBY/ON indicator instantly changes from red to green and the LCD TV set is turned on.
- To turn off the main power, press ⏻ again.

■ Operating the menu with the control panel (See page 8.)

Button operations on the control panel correspond to the ones on the remote control as shown below.

(Input)	OK on the remote control
MENU	MENU on the remote control
P ()/() (Channel)	▲/▼ on the remote control
(+)/(-) (Volume)	◀/▶ on the remote control

Headphones

Plug the headphone mini-plug into the headphone jack.

Adjust the sound volume using (+)/(-) on the remote control.

On-screen display



NOTE


- Headphones are not included in the supplied accessories.
- No sound is heard from the main unit speakers when a headphone mini-plug is connected into the headphone jack.
- Do not set the volume at a high level. Hearing experts advise against extended listening at high volume levels.

Connecting External Devices

You can enjoy picture and sound by connecting devices, such as a VCR or home video game system, to the terminals located on the rear of the LCD TV set.

When connecting an external device, turn off the power of the LCD TV set first to prevent any possible damage.

Terminals

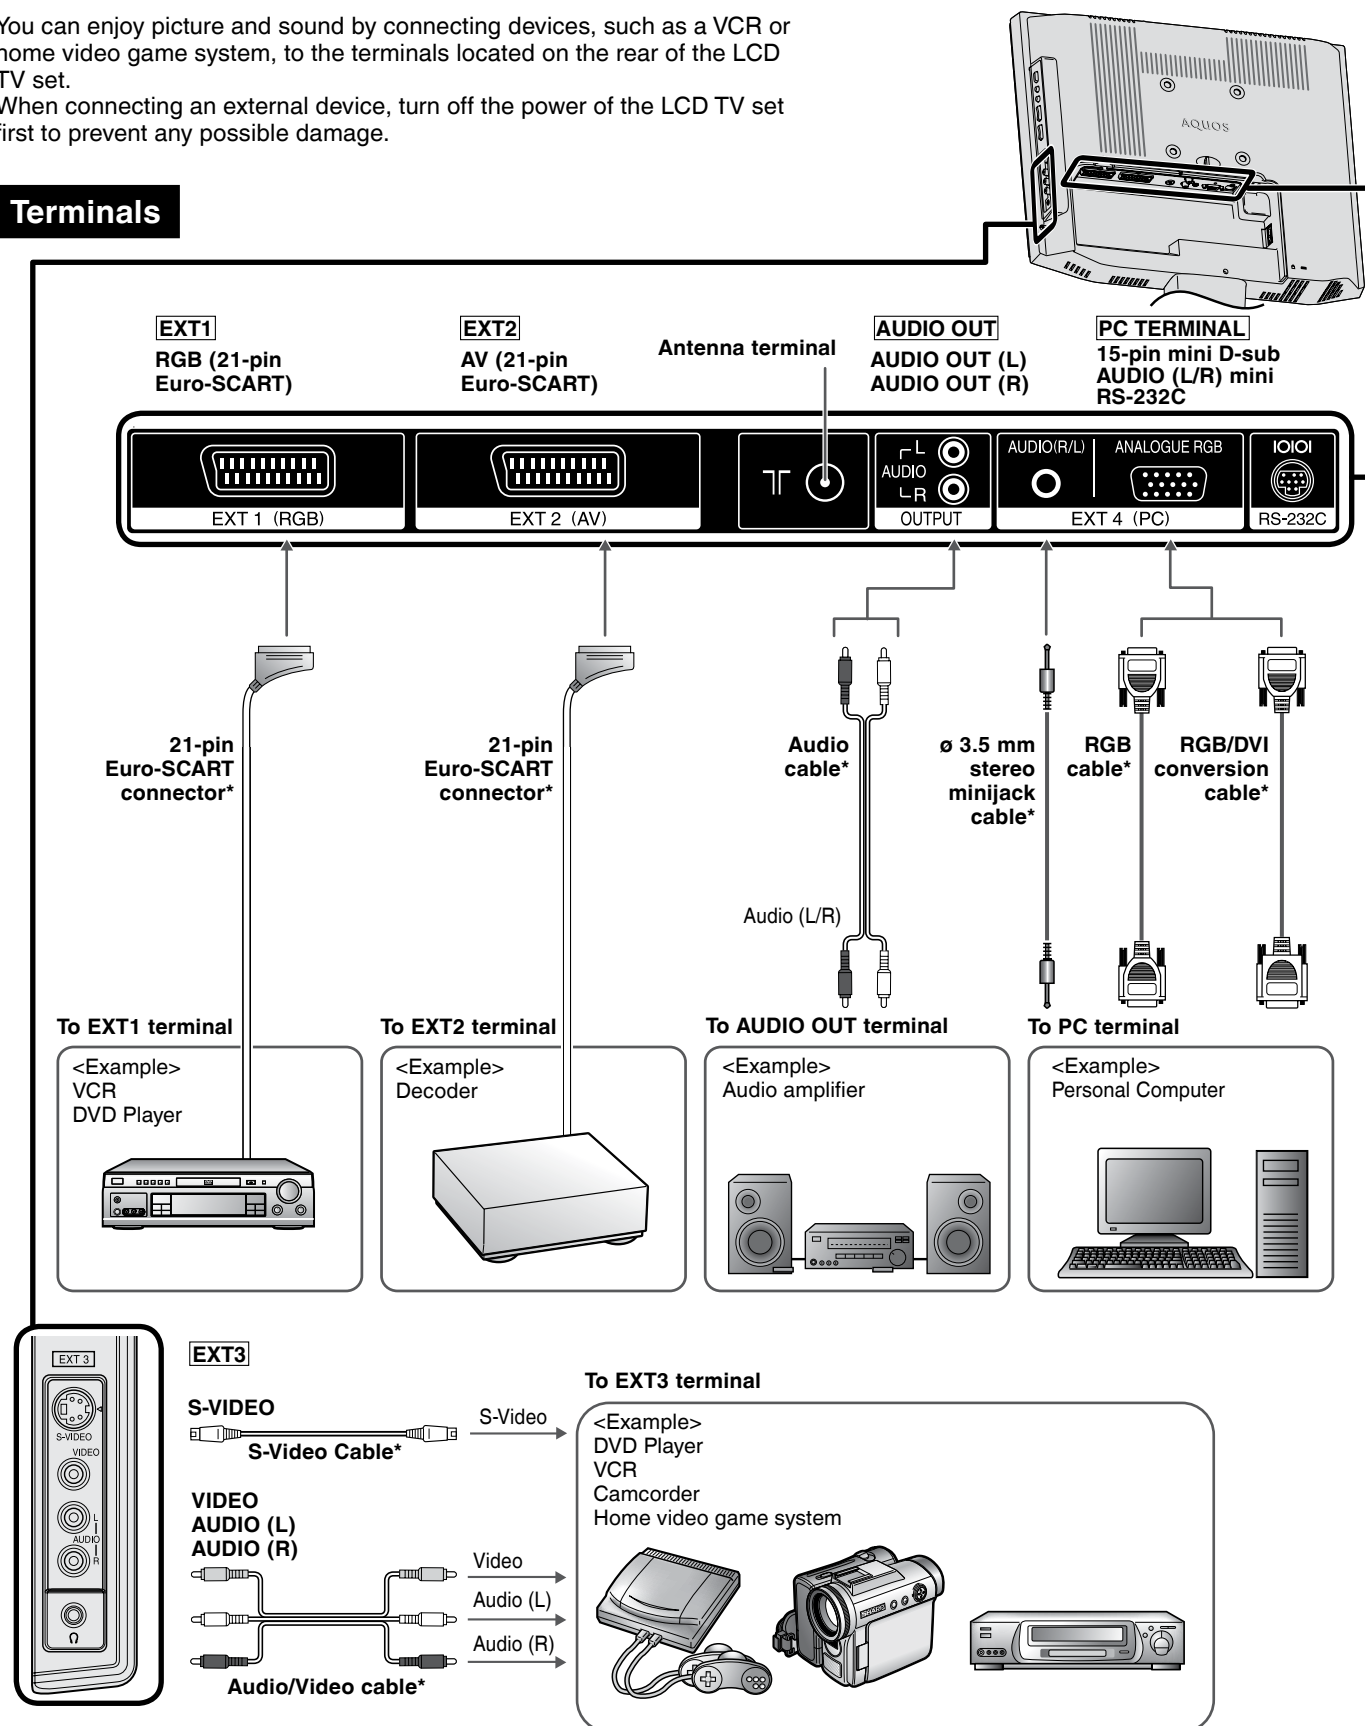

NOTE

- The cables marked with * are commercially available items.
- For more information about external device connections, see the operation manuals of your external devices.
- Make sure that the corresponding cables are connected to each terminal. Connecting other cables may result in a malfunction.
- EXT3 has two terminals, VIDEO and S-VIDEO terminals. If your external device has an S-VIDEO terminal, S-VIDEO connection is recommended. S-VIDEO provides a finer, more detailed picture. If both terminals are connected, S-VIDEO terminal takes a priority.
- The PC input terminals are DDC1/2B-compatible.
- Refer to page 15 for a list of PC signals compatible with the TV.
- Macintosh adaptor may be required for use for some Macintosh computers.
- When connecting to a PC, the correct input signal type is automatically detected.


Basic Operation

First Installation

When you turn on the LCD TV set for the first time, the First Installation routine, which makes installation easier, is activated. Using this routine, you can select the on-screen display language and automatically search for and store all the receivable TV channels.

NOTE

- You can also execute the First Installation routine by selecting “First installation” on the Setup Menu screen.
For selecting the menu items, see the right column.

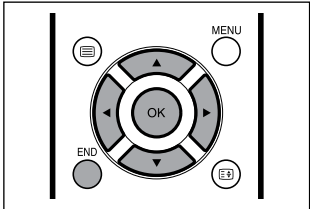

- Press **⏻ (MAIN POWER)** on the LCD TV set.
 - The “First installation” screen with a list of the languages for the on-screen display is displayed.
- Press **▲/▼/◀/▶** to select the desired language, and press **OK**.

English	Russian
Español	Português
Deutsch	Türkçe
Français	Greek
Italiano	Suomi
Svenska	Polski
Nederlands	
- Press **▲/▼** to select the desired item, and press **◀/▶** to make the setting.

Country	◀Germany▶
Colour system	PAL
Sound system	B/G
Start search	
- Press **▲/▼** to select “Start search”, and press **OK**.
 - The automatic programme search begins.
- Press **END** to exit.

NOTE

- After the First installation routine, you can change the settings of “Language” (page 11), and perform “Automatic search” (page 12) again.

Selecting Menu Items

The menus can be used to adjust the various settings of your LCD TV set.
For details on setting each menu item, refer to the page number indicated below.

NOTE

- The illustrations and on-screen displays in this manual are for explanation purposes and may vary slightly from the actual appearance.
- “Programmes” or “First installation” cannot be set when the EXT1, EXT2, EXT3 or PC mode is selected as an input mode.
- Settings most recently adjusted will be saved in memory.

■ Using the remote control

- Press **MENU** to display the Menu screen.
- Press **◀/▶** to select the desired menu item.
 - The cursor moves left or right.
 - The cursor indicates the selected menu item.
- Press **▲/▼** to select the desired item, and press **◀/▶** to adjust the selected item.
- Press **MENU** to return to the previous screen or **END** to return to the normal screen.


Picture	Page
AV mode	[DYNAMIC] 9
Backlight	[Bright] 9
Contrast	[50] 9
Brightness	[0] 9
Colour	[+4] 9
Tint	[0] 9
Sharpness	[+2] 9
Black	9
Film mode	9
DNR	9
Colour temp.	9
Reset	9

Sound	Page
Treble	[0] 9
Bass	[0] 9
Balance	[0] L R 9
Loudsp. sound	10
Auto vol.	10
Clear voice	10
Sound wide	10
Reset	9


Setup	Page
Programmes	12
First installation	8
Wide mode	13
EXT connections	11
Language	11

Features	Page
Power management	13
Sleep timer	13
Auto power off	13
Blue screen	13
Child lock	13

The bar below is an operational guide for the remote control. The bar will change in accordance with each menu setting screen.

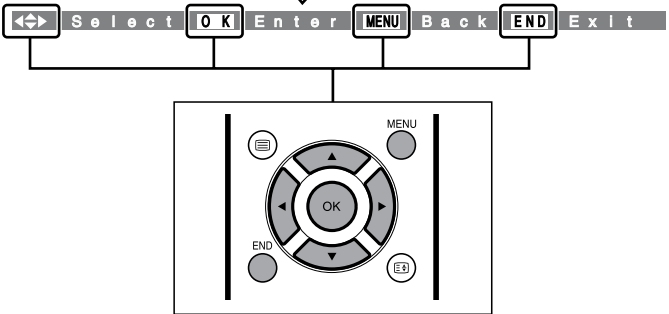

Useful Features

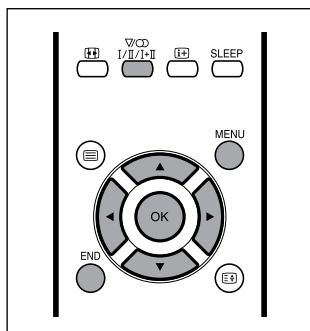

Picture Adjustments

Adjust the picture to suit your preference. See the table below for the adjustment items.

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀/▶** to select "Picture".
- 3 Press **▲/▼** to select a specific adjustment item.
- 4 Press **◀/▶** to adjust the item to your desired position, and press **END** to exit.

Adjustment items for AV source

Selected item	◀ button	▶ button
Contrast	For less contrast	For more contrast
Brightness	For less brightness	For more brightness
Colour	For less colour intensity	For more colour intensity
Tint	Skin tones become purplish.	Skin tones become greenish.
Sharpness	For less sharpness	For more sharpness

Adjustment items for PC source

Selected Item	Description
Contrast	To adjust the contrast of PC Monitor screen.
Brightness	To adjust the brightness of PC Monitor screen.
V-Pos.	To adjust the vertical position of the image on the PC Monitor screen. Each video standard will require a different value for this setting.
H-Pos.	To adjust the horizontal position of the image on the PC Monitor screen. Each video standard will require a different value for this setting.
Clock	To minimize any vertical bars or stripes visible on the screen background.
Phase	This must be adjusted after the frequency has been set optimize picture quality.

Sound Adjustments

Adjust the sound quality and volume to suit your preference. See the table below for the adjustment items.

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀/▶** to select "Sound".
- 3 Press **▲/▼** to select a specific adjustment item.
- 4 Press **◀/▶** to adjust the item to your desired position, and press **END** to exit.

Selected item	◀ button	▶ button
Treble	For weaker treble	For stronger treble
Bass	For weaker bass	For stronger bass
Balance	Decrease audio from the right speaker.	Decrease audio from the left speaker.

NOTE


For the picture and sound adjustments

- When resetting all adjustment items to factory preset values, perform the following procedure.
 - ① Press **▲/▼** to select "Reset", and press **OK**.
 - ② Press **▲/▼** to select "Yes", and press **OK**.

Picture Mode Settings

You can make various picture mode settings.

- 1 Perform steps 1 and 2 in **Picture Adjustments** to display the Picture Menu screen.
- 2 Press **▲/▼** to select the desired item, and press **OK**.
- 3 Press **▲/▼** to select the picture mode, and press **OK**.
- 4 Press **END** to exit.

Selected items	Choice	Description
AV mode	DYNAMIC	For a clear-cut image emphasising high contrast for sports viewing.
	STANDARD	For a highly defined image in a normally bright room.
	SOFT	Creates a softer image.
	ECO	Reduces power consumption.
	USER	Allows the user to customise settings as desired. You can set the mode for each input source.
Backlight**1 	Adjust the screen brightness.	
	Bright	Maximum brightness.
	Medium	Suitable for viewing in well-lit areas. Saves energy.
	Dark	Sufficiently bright when viewing in dim areas.
Black	On	For easier viewing, change the viewing depth by selecting a level for automatically adjusting the dark portion of an image.
	Off	
Film mode	On	Automatically detect a film-based source (originally encoded at 24/25 frames/second, depending on the vertical frequency), analyses it then recreates each still film frame for high-definition picture quality.
	Off	
DNR	High	Produce a clearer image.
	Middle	
	Low	
	Off	
Colour temp.*2	Adjust the colour temperature to give the best white image.	
	High	White with bluish tone
	Middle	Natural tone
	Low	White with reddish tone

*1 Direct setting can be made with **BACKLIGHT** of the remote control.

*2 Colour temp. setting also can be made in PC mode.

Useful Features (continued)

Sound Mode Settings

You can make various sound mode settings.

- 1

Perform steps 1 and 2 in **Sound Adjustments** to display the Sound Menu screen.
- 2

Press ▲/▼ to select the desired item, and press **OK**.
- 3

Press ▲/▼ to select the sound mode, and press **OK**.
- 4

Press **END** to exit.

Selected item	Choice
Loudsp. sound	Stereo ↔ Mono Sound 1 ↔ Sound 2 ↔ Sound 1+2 ↔ Mono Nicam ↔ Mono Mono
Auto vol.	On ↔ Off
Clear voice	On ↔ Off
Sound wide	On (For increasing the spread of the sound) ↔ Off

NOTE

For the “Loudsp. sound” setting

- The sound output modes differ depending on whether or not a NICAM or A2 stereo signal is received. See “NICAM and A2 Stereo Broadcast Selection” below.

For the “Auto vol.” setting

- Different sound sources, fairly often do not have the same volume level, for example the changing from movie to the advertisements. The Automatic Volume Control (Auto vol.) solves this problem and equalises the volume levels.

For the “Clear voice” setting

- This function emphasises speech voice against the background noise for more intelligibility. It is not recommended for music sources.

NICAM and A2 Stereo Broadcast Selection

This enables the selection of the reception mode when receiving a NICAM-I, NICAM-B/G or an A2 stereo signal. To let you enjoy NICAM or A2 stereo broadcasting, this LCD TV set receives NICAM stereo system, A2 stereo system, bilingual, and monaural broadcasts.

Each time you press $\frac{\nabla\infty}{\text{I/II/I+II}}$ (**Sound**), the mode changes as follows:

Broadcast	Stereo*	Bilingual	Monaural
NICAM	Stereo ↓ Mono	→ Sound 1 → Sound 2 ← Mono ← Sound 1+2 ←	Nicam ↓ Mono
A2 Stereo	Stereo ↓ Mono	→ Sound 1 → Sound 2 ← Mono ← Sound 1+2 ←	—


* When “Mono” is selected, the TV sound is output monaurally.


NOTE

- If the button is not pressed for a few seconds, the mode setting is automatically terminated and the LCD TV set returns to the normal mode.

Setup Settings

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀/▶** to select "Setup".
- 3 Press **▲/▼** to select the desired item, and press **OK**.
- 4 Press **▲/▼** to select the desired mode, and press **OK**.
- 5 Press **END** to exit.

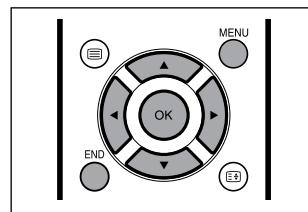

Selected item	Choice/Description		
Programmes	See page 12.		
First installation	See page 8.		
Wide mode	See page 13.		
EXT connections 	It is possible to manually adjust various settings for connections with external devices on the "EXT connections" screen. Select the appropriate signal type and colour standard for the signals from the video equipment connected to the EXT1, EXT2 or EXT3 terminal.		
	EXT1 EXT2 EXT3 (Y/C) EXT3 (CVBS)	Signal type*1 Colour system	Auto, CVBS, RGB, Y/C: To select the signal type of external equipment. Auto, PAL, SECAM, NTSC4.43, NTSC3.58, PAL60
Language	The language for the on-screen display can be selected from English, Spanish, German, French, Italian, Swedish, Dutch, Russian, Portuguese, Turkish, Greek, Finnish, and Polish.		

*1 This item is visible only when "EXT1" or "EXT2" is selected for the "EXT connections" setting.

NOTE

EXT connections:

- If no (colour) image is displayed, try to change to a different signal type.
- Switching between AV input signals may be slow, depending on the settings in "Colour system". If you want to speed up signal switching, select "Auto" in "Colour system" to the current reception colour system.

Useful Features (continued)

Programmes

TV only

- 1


Press **MENU** to display the Menu screen.
- 2

Press **◀/▶** to select “Setup”.
- 3

Press **▲/▼** to select “Programmes”, and press **OK**.
- 4

Press **▲/▼** to select the desired item, and press **OK**.
- 5

Press **END** to exit.

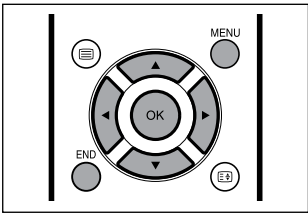

Automatic search

Manual adjustment

[1] Automatic search
Perform the procedure above to search for and store new TV programmes after the First Installation routine.




Selected item	Choice/Description
Country	Select your country or area from the displayed items.
Colour system	Auto, PAL, SECAM
Sound system	B/G, I, D/K, L/L', Auto
Start search	Start Automatic search.

NOTE

- You can change “Colour system” and “Sound system” only when “Other count.” is selected in “Country”.
- See page 8 for details on the search process.

[2] Manual adjustment
Individual settings of programmes can be adjusted.

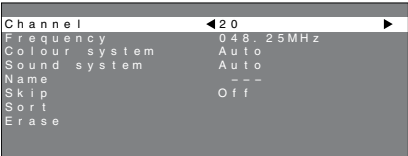

Selected item	Choice/Value range	Description
Channel	0–99	The channel changes to the higher or lower channel.
Frequency	44.25 – 863.25 (MHz)	Receivable frequencies depending on TV norm, installation site, and range.
Colour system	Auto, PAL, SECAM	Colour norm
Sound system	B/G, I, D/K, L/L', Auto	TV norm
Name	Alphabets, numerical values (e.g. t, 7, etc.)	Programme name (up to 5 characters)
Skip	On ↔ Off	Channel numbers with a “(♦) (RED)” mark on the left are set to Skip.
Sort		Press ▲/▼/◀/▶ to select the desired programme, and press OK to sort. <ul style="list-style-type: none">• When OK is pressed, the Move mode is activated. Press ▲/▼ to move the currently marked programme to the desired programme position. When the channel has moved to the desired position, all the preceding/subsequent channel position will go up/down. Press OK to exit the Move mode.
Erase		Press ▲/▼/◀/▶ to select the programme to be erased, and press OK . <ul style="list-style-type: none">• If you want to erase programmes in a connected range, select the first programme of the range, and then select the last one. Press OK to erase the selected programme(s). All the subsequent programmes move up.

NOTE


- Depending on the settings in the colour system of the channels, switching between channels may be slow. If you want to speed up channel switching, switch “Auto” in “Colour system” to the current reception system (PAL or SECAM).

Using the Programme Table

The Programme table shows a list of all receivable programmes. They are located in channels 1 to 99.

To select the desired programme

- 1 Press **OK** to display the Programme table.
- 2 Press **▲/▼/◀/▶** to select the desired programme.
 - To display the next or previous list of the Programme table, press **▲/▼** when the cursor is at a programme in the lower-right or upper-left position, or press **◀/▶** when the cursor is at a programme in the right or left column.
- 3 Press **OK** to display the selected programme.

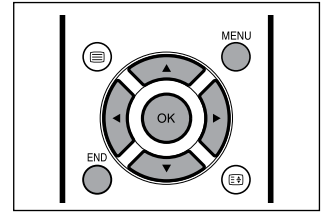

Wide Mode

TV/AV only

You can select the picture size. Selectable picture size varies with the type of signal received.



- 1 Press **MENU** to display the Menu screen.
 - The Wide mode menu can be displayed directly by pressing the **Wide Mode** button.
- 2 Press **◀/▶** to select "Setup".
- 3 Press **▲/▼** to select the "Wide mode", and press **OK**.
- 4 Press **▲/▼** to select the desired mode, and press **OK**.
- 5 Press **END** to exit.

Choice	Description
Auto	The optimum Wide mode is automatically chosen for every broadcast, even if broadcast signal format will be changed, and VCR or DVD containing the WSS information.
4:3	For 4:3 "standard" pictures. For 16:9 signals the picture will expand to full size format. With some programmes may appear on the top and bottom further on black bars.
16:9	For 16:9 letterbox pictures. Bars appear on the top and bottom.

Feature Settings

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀/▶** to select "Features".
- 3 Press **▲/▼** to select the desired item, and press **OK**.
- 4 Press **▲/▼** to select the desired mode, and press **OK**.
- 5 Press **END** to exit.

Features
Power management
Sleep timer
Auto power off
Blue screen
Child lock

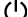Selected item	Choice	Description
Power management*1	On	<ul style="list-style-type: none">If there is no signal input for 8 minutes, the TV enters the standby mode.Even if you start using the PC and the signal inputs again, the TV stays in standby mode.The TV turns on again by pressing  on the TV or  on the remote control unit. (See page 8.)
	Off	
<div><div>Sleep timer*2</div><div><div>Off</div><div>30 min</div><div>60 min</div><div>90 min</div><div>120 min</div></div></div>	Off	You can set “Sleep timer” to automatically turn off the LCD TV set.
	30 min	
	60 min	
	90 min	
	120 min	
	Auto power off	On
Off		
Blue screen	On	You can set the TV to automatically change to a blue screen and mute the sound if the signal is weak or absent, or when there is no input from an external device.
	Off	
Child lock	See page 14.	

^{*1} This item is visible only when TV is PC mode.

^{*2} The status display appears by pressing **SLEEP**.

Useful Features (continued)

Child Lock

Important:

- Please refer to page 19 for “IMPORTANT NOTE ON DISENGAGING ADVANCED CHILD LOCK”.

The Child lock function blocks the viewing of any channels. To use this function, you need to define your PIN (Personal Identification Number) first.

[1] Defining a PIN

- 1 Press **MENU** to display the Menu screen.
- 2 Press **◀/▶** to select “Features”.
- 3 Press **▲/▼** to select “Child lock”, and press **OK** to display the PIN input screen.
- 4 Input the desired four-digit PIN (e.g. 1234) with **Channel Select**.

Please define your PIN

1 2 3 4

NOTE

- Be sure to make a note of your PIN before pressing **OK**.
- The PIN will not be set if **MENU** or **END** is pressed before the fourth digit has been input.

- 5 Press **OK** to accept the input PIN.
- 6 Press **END** to exit.

[2] Setting a Child Lock

- There are two different ways of activating a Child lock:
 1. General child lock for all programmes
 2. Programme-position-related child lock

To set a Child Lock for all programmes

- 1 Perform steps 1 to 3 in [1] Defining a PIN to display the PIN input screen.
- 2 Input your four-digit PIN (e.g. 1234) with **Channel Select**.

Please input your PIN

? ? ? ?

- When the PIN is correctly input, the “Child lock” screen is displayed.

- 3 Press **▲/▼** to select “For all programmes”, and press **OK**.

For all programmes
For individual prog. only
Change PIN
Cancel PIN

- 4 Press **▲/▼** to select “Yes”, and press **OK**.
 - The lock remains effective until “No” is selected.
- 5 Press **END** to exit.

To set a Child Lock for individual programmes

- 1 Perform steps 1 and 2 in [2] Setting a Child Lock to display the “Child lock” screen.

- 2 Press **▲/▼** to select “For individual prog. only”, and press **OK**.

For all programmes
For individual prog. only
Change PIN
Cancel PIN

- 3 Press **▲/▼/◀/▶** to select the desired programme.

- 4 Press **OK** to lock the programme.
 - The locked programme is displayed in red.

NOTE

- To unlock the programme, select the programme, and press **OK**.
- The Child lock remains effective until it is cancelled.

- 5 Press **END** to exit.

[3] Changing/Cancelling a PIN

To change a PIN

- 1 Perform steps 1 and 2 in [2] Setting a Child Lock to display the “Child lock” screen.

- 2 Press **▲/▼** to select “Change PIN”, and press **OK**.
 - The currently defined PIN is displayed.

For all programmes
For individual prog. only
Change PIN
Cancel PIN

- 3 Input the new four-digit PIN (e.g. 5678) with **Channel Select**, and press **OK**.

- 4 Press **END** to exit.

To cancel a PIN

- 1 In step 2 above, press **▲/▼** to select “Cancel PIN”, and press **OK**.

- 2 Press **▲/▼** to select “Yes”, and press **OK**.

[4] Temporarily cancelling the Child Lock setting

You can view a programme for which a Child lock has been set by temporarily cancelling the Child lock setting. Perform the procedure below to input your PIN and cancel the Child lock if you are prompted to do so.

When the PIN input screen is displayed, input your PIN with **Channel Select**.

- The normal screen appears when the PIN is correctly input.

Please input your PIN


? ? ? ?

Teletext

■ What is Teletext?


Teletext is an information service organised like a magazine, which is provided by some TV stations in addition to regular television broadcasting. Your LCD TV set receives special Teletext signals broadcast by a TV station, processes the information and displays it graphically on the screen. News, weather and sports information, stock exchange prices, programme reviews and closed captioning for people hard of hearing are among the many services available through Teletext.

■ Teletext mode

Teletext is turned on/off with  (**Teletext**) on the remote control. You can operate your LCD TV set in Teletext mode directly by inputting commands with the remote control.

■ Operating instructions in Teletext mode

- The FLOF system for Teletext is transmitted in the UK currently.
- The TOP system for Teletext is transmitted in Germany currently.

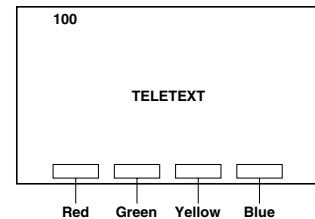
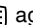





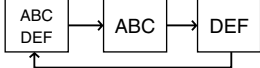

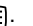
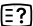



■ Using the TOP line

When TOP Teletext is being broadcast, a control line and TOP line can be displayed on the screen. The TOP line involves the operating instructions associated with all of the **Coloured** buttons if TOP text is transmitted.

Press the **Coloured** buttons to operate the Teletext screen.

- Press **Red** to display the previous page and **Green** to display the next page. **Yellow** and **Blue** are as indicated on the TOP line.

Operation button*	Description	To turn off the function
P (^)/(v) Channel Select (0-9)	Changes the page number. Directly select any page from 100 to 899 by using 0-9 .	—
 (Teletext)	Displays Teletext screen.	Press  again.
 (Subpage) Channel Select (0-9)	Displays a control line to change subpages. Select the desired subpage number by using 0-9 .	Press  again.
 (Hold)	Holds the current Teletext page.	Press  again.
 (Top/Bottom/Full)	Zooms the current Teletext page as shown below. 	—
 (Subtitle)	Quickly activates subtitles.	Press  .
 (Reveal)	Display hidden information.	Press  again.

* See page 5 for details on the operation buttons.

Appendix

PC compatibility chart

Resolution		Horizontal Frequency	Vertical Frequency	VESA Standard
VGA	640 × 480	31.5 kHz	60 Hz	✓
SVGA*	800 × 600	37.9 kHz	60 Hz	✓

* We recommend that the output setting from the PC be set to VGA as SVGA will produce less than optimal viewing quality.

VGA and SVGA are registered trademarks of International Business Machines Co., Inc.

NOTE

- This TV has only limited PC compatibility, correct operation can only be guaranteed if the video card conforms exactly to the VESA 60Hz standard. Any variations from this standard will result in picture distortions.

Appendix (continued)


RS-232C port specifications

PC Control of the TV

- When a program is set, the TV can be controlled from the PC using the RS-232C terminal.
The input signal (PC/video) can be selected, the volume can be adjusted and various other adjustments and settings can be made, enabling automatic programmed playing.
- Attach an RS-232C cable cross-type (commercially available) to a 9 pin D-sub/MINI-DIN (optional: AN-A1RS) for the connections.

NOTE

- This operation system should be used by a person who is accustomed to using PCs.

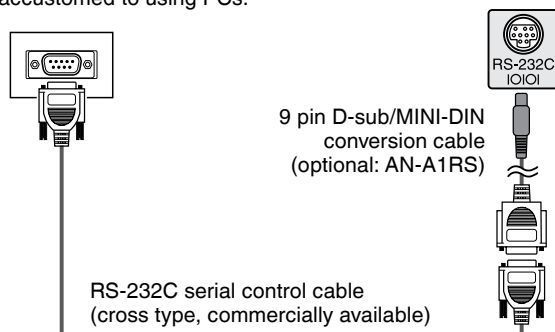

Communication conditions

Set the RS-232C communications settings on the PC to match the TV's communications conditions.

The TV's communications settings are as follows:

Baud rate:	9,600 bps
Data length:	8 bits
Parity bit:	None
Stop bit:	1 bit
Flow control:	None

Communication procedure

Send the control commands from the PC via the RS-232C connector. The TV operates according to the received command and sends a response message to the PC.

Do not send multiple commands at the same time. Wait until the PC receives the OK response before sending the next command.

Command format

Eight ASCII codes + CR

C1	C2	C3	C4	P1	P2	P3	P4	↵
----	----	----	----	----	----	----	----	---

Command 4-digits Parameter 4-digits Return code

Command 4-digits: Command. The text of four characters.

Parameter 4-digits: Parameter 0 – 9, x, blank, ?

Parameter

Input the parameter values, aligning left, and fill with blank(s) for the remainder. (Be sure that four values are input for the parameter.)

When the input parameter is not within an adjustable range, "ERR" returns. (Refer to "Response code format".)

0			
0	0	0	9
-	3	0	
1	0	0	
0	0	5	5

When "?" is input for some commands, the present setting value responds.

?			
?	?	?	?

Response code format

Normal response

O	K	↵
---	---	---

Return code (0DH)

Problem response (communication error or incorrect command)

E	R	R	↵
---	---	---	---

Return code (0DH)

Commands

CONTROL ITEM	COMMAND	PARAMETER	CONTROL CONTENTS
POWER SETTING	P O W R	0 _ _ _	POWER OFF
INPUT SELECTION A	I T G D	_ _ _ _	INPUT SWITCHING (TOGGLE)
	I T V D	_ _ _ _	TV (CHANNEL FIXED)
	I A V D	0 _ _ _	TV
	I A V D	1 _ _ _	EXT1
	I A V D	2 _ _ _	EXT2
	I A V D	3 _ _ _	EXT3
	I A V D	4 _ _ _	PC
	I A V D	? ? ? ?	0 to 4
CHANNEL	D C C H	* * _ _	TV DIRECT CHANNEL (0 ~ 99)
	D C C H	? ? ? ?	0 to 99
	C H U P	_ _ _ _	CHANNEL UP
	C H D W	_ _ _ _	CHANNEL DOWN
INPUT SELECTION B	I N P 1	3 _ _ _	EXT1 (CVBS)
	I N P 1	4 _ _ _	EXT1 (RGB)
	I N P 1	? ? ? ?	1 to 2
	I N P 2	2 _ _ _	EXT2 (Y/C)
	I N P 2	3 _ _ _	EXT2 (CVBS)
	I N P 2	? ? ? ?	0 to 1
	I N P 3	0 _ _ _	EXT3
	I N P 3	? ? ? ?	1 to 2
AV MODE SELECTION	A V M D	0 _ _ _	AV MODE SELECTION (TOGGLE)
	A V M D	1 _ _ _	STANDARD
	A V M D	2 _ _ _	SOFT
	A V M D	3 _ _ _	ECO
	A V M D	4 _ _ _	USER
	A V M D	5 _ _ _	DYNAMIC
	A V M D	? ? ? ?	1 to 5
VOLUME	V O L M	* * _ _	VOLUME (0 - 50)
	V O L M	? ? ? ?	0 to 50
POSITION	H P O S	* * * _	H-POSITION PC (-30 to +30)
	H P O S	? ? ? ?	PC (-30 to +30)
	V P O S	* * * _	V-POSITION PC (-10 to +10)
	V P O S	? ? ? ?	PC (-10 to +10)
	C L C K	* * * _	CLOCK (0 to 180)
	C L C K	? ? ? ?	0 to 180
	P H S E	* * * _	PHASE (0 to 40)
	P H S E	? ? ? ?	0 to 40
WIDE MODE	W I D E	0 _ _ _	WIDE MODE (Toggle)
	W I D E	1 _ _ _	4:3
	W I D E	2 _ _ _	16:9
	W I D E	? ? ? ?	1 to 2
MUTE	M U T E	0 _ _ _	MUTE (Toggle)
	M U T E	1 _ _ _	MUTE ON
	M U T E	2 _ _ _	MUTE OFF
	M U T E	? ? ? ?	1 to 2
SOUND WIDE	A C D V	0 _ _ _	SOUND WIDE (Toggle)
	A C D V	1 _ _ _	SOUND WIDE ON
	A C D V	2 _ _ _	SOUND WIDE OFF
	A C D V	? ? ? ?	1 to 2
AUDIO CHANGE	A C H A	_ _ _ _	SOUND SELECT (ST/Bilingual/mono)
SLEEP TIMER	O F T M	0 _ _ _	OFF
	O F T M	1 _ _ _	30 min
	O F T M	2 _ _ _	60 min
	O F T M	3 _ _ _	90 min
	O F T M	4 _ _ _	120 min
	O F T M	? ? ? ?	0 to 120

NOTE

- If an underbar (_) appears in the parameter column, enter a space.
- If an asterisk (*) appears, enter a value in the range indicated in brackets under CONTROL CONTENTS.

Troubleshooting

Before calling for repair services, make the following checks for possible remedies to the symptoms encountered.

LCD TV set

Problem	Check item	Page
There is no picture or sound. There is no picture from EXT3.	• Reception other than that of broadcasting stations could be the problem.	–
	• Make sure the input mode is set to TV.	5
	• Make sure the main power switch of the LCD TV set is on.	6
	• Make sure the Picture adjustment is properly adjusted.	9
	• The fluorescent lamp may have reached the end of its service life.	–
	• Make sure the S-VIDEO terminal has nothing connected.	7
There is no picture or sound, just noise. The picture is not clear.	• Make sure the volume is not set to minimum.	5
	• Make sure the sound is not set to mute.	5
There is no picture or sound, just noise. The picture is not clear.	• Make sure the antenna cable is properly connected.	3
	• Bad reception could be the problem.	–
The picture is too light or improperly tinted.	• Check the colour adjustment.	9
The picture is too dark.	• Check if “Backlight” is set to “Dark”.	9
	• Check “Contrast”.	9
	• The fluorescent lamp may have reached the end of its service life.	–
Remote control does not work.	• Check if batteries in the remote control have sufficient power.	4
	• Make sure the remote sensor window is not in strong light.	4
Unit cannot be operated.	• External influences such as lightning, static electricity, etc., may cause improper operation. In this case, operate the unit after turning the power off, or unplugging the AC cord and re-plugging it in 1 or 2 minutes.	–

Antenna

Problem	Check item
The picture is not sharp. The picture shakes.	<ul style="list-style-type: none"> • The reception may be weak. • The quality of the broadcast may also be bad. • Make sure the antenna is facing the correct direction. • Make sure the outside antenna has not been disconnected.
The picture has ghosts.	<ul style="list-style-type: none"> • Make sure the antenna is facing the correct direction. • Broadcast waves may be reflected from adjacent mountains or buildings.
The picture is spotted.	<ul style="list-style-type: none"> • There may be interference from automobiles, trains, high-voltage lines, neon lights, etc. • There may be interference between the antenna cable and power cable. Try positioning them further apart.
There are stripes on the screen or colours fade.	<ul style="list-style-type: none"> • Is the unit receiving interference from other devices? Transmission antennas of radio broadcasting stations and transmission antennas of amateur radios and mobile phones may also cause interference. • Use the unit as far apart as possible from devices that may cause possible interference.

■ Cautions regarding use in high and low temperature environments

- When the unit is used in a low temperature space (e.g. room, office), the picture may leave trails or appear slightly delayed. This is not a malfunction, and the unit will recover when the temperature returns to normal.
- Do not leave the unit in a hot or cold location. Also, do not leave the unit in a location exposed to direct sunlight or near a heater, as this may cause the cabinet to deform and the LCD panel to malfunction. (Storage temperature: –20°C to +60°C)

Appendix (continued)

Specifications

Model	LC-20S5E-BK/LC-20S5E-WH
LCD panel	20" Advanced Super View & BLACK TFT LCD
Number of dots	921,600 dots VGA
Video colour system	PAL/SECAM/NTSC
TV	TV-Standard (CCIR): B/G, I, D/K, L/L' TV-Tuning System: Auto preset 99 ch. STEREO/BILINGUAL: NICAM, A2 stereo AUTO PRESET: YES CATV: ~Hyper Band
Brightness	430 cd/m ²
Lamp life	60,000 hours*
Viewing angles	H: 170° V: 170°
Audio amplifier	2 W × 2

Speakers	71 mm × 31 mm 2 pcs.
Terminals	EXT1: 21-pin Euro-SCART EXT2: 21-pin Euro-SCART EXT3: S-VIDEO, VIDEO, AUDIO PC: 15 pin mini D-sub, ø 3.5 mm jack (Audio input), RS-232C OUT: AUDIO Antenna: DIN Headphones: 3.5 mm ø jack (side)
OSD language	English/Spanish/German/French/Italian/ Swedish/Dutch/Russian/Portuguese/ Turkish/Greek/Finnish/Polish
Power requirement	AC 220-240 V, 50/60 Hz
Power consumption	74 W (1 W Standby) AC 230 V
Weight (approx.)	Display only: 5.4 kg Display with stand: 6.2 kg
Operating temperature	0°C to +40°C

* Typical time for power output decrease of about one-half assuming continuous use in a room with normal lighting, normal brightness and temperature at 25°C.

■ As a part of policy of continuous improvement, SHARP reserves the right to make design and specification changes for the LCD TV set improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

End of Life Disposal



Attention: Your product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

A. Information on Disposal for Users (private households)

1. In the European Union

Attention: If you want to dispose of this equipment, please do not use the ordinary dust bin!

Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge*. In some countries* your local retailer may also take back your old product free of charge if you purchase a similar new one.

*) Please contact your local authority for further details.

If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

2. In other Countries outside the EU

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.

For Switzerland: Used electrical or electronic equipment can be returned free of charge to the dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch or www.sens.ch.

B. Information on Disposal for Business Users

1. In the European Union

If the product is used for business purposes and you want to discard it: Please contact your SHARP dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) might be taken back by your local collection facilities.

For Spain: Please contact the established collection system or your local authority for take-back of your used products.

2. In other Countries outside the EU

If you wish to discard of this product, please contact your local authorities and ask for the correct method of disposal.

IMPORTANT NOTE ON DISENGAGING ADVANCED CHILD LOCK


We suggest that you remove the following instruction from the operation manual to prevent children from reading it. As this operation manual is multilingual, we also suggest the same with each language. Keep it in a safe space for future reference.

If you have forgotten your personal code number and cannot disengage ADVANCED CHILD LOCK, follow the procedure below.

1. Press **MENU** to display the Menu screen.
2. Press **◀/▶** to select "Features".
3. Press **▲/▼** to select "Child lock", and press **OK**.
4. The PIN input menu is displayed.
5. Input "3001" with **Channel Select**.
The Child lock setting menu is displayed.

ADVANCED CHILD LOCK will now be disengaged.

Unit: mm

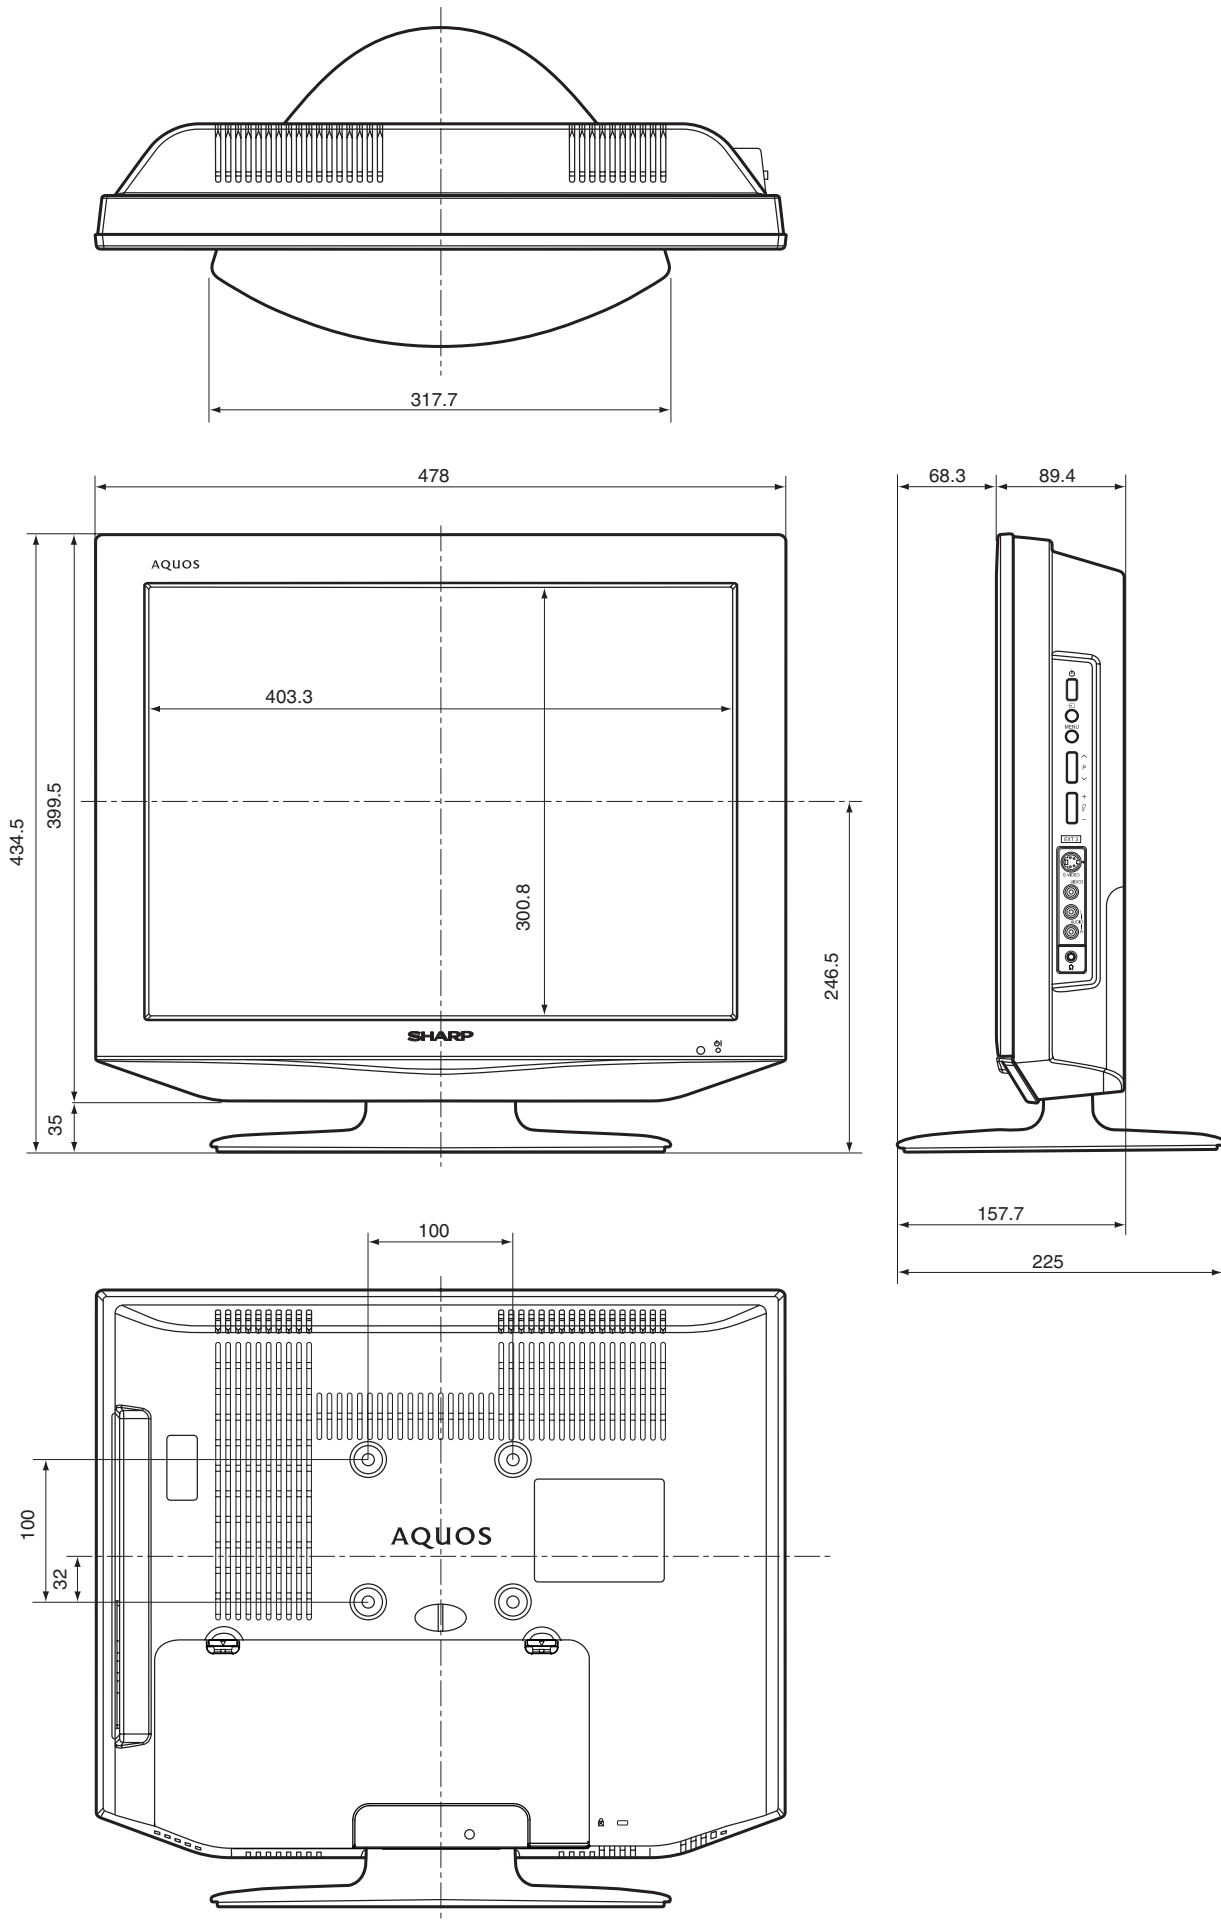

SHARP®

SHARP ELECTRONICS (Europe) GmbH

Sonnistraße 3, D-20097 Hamburg, Deutschland

SHARP CORPORATION



J31A0301D SH 07/03

Printed on environmentally friendly paper
Auf ökologischem Papier gedruckt
Imprimé sur papier écologique
Stampato su carta ecologica
Impreso en papel ecológico
Afgedrukt op ecologisch papier



Printed in Thailand
Gedruckt in Thailand
Imprimé en Thaïlande
Stampato in Tailandia
Impreso en Tailandia
Gedruckt in Thailand
J31A0301D
07P03-TH-NO